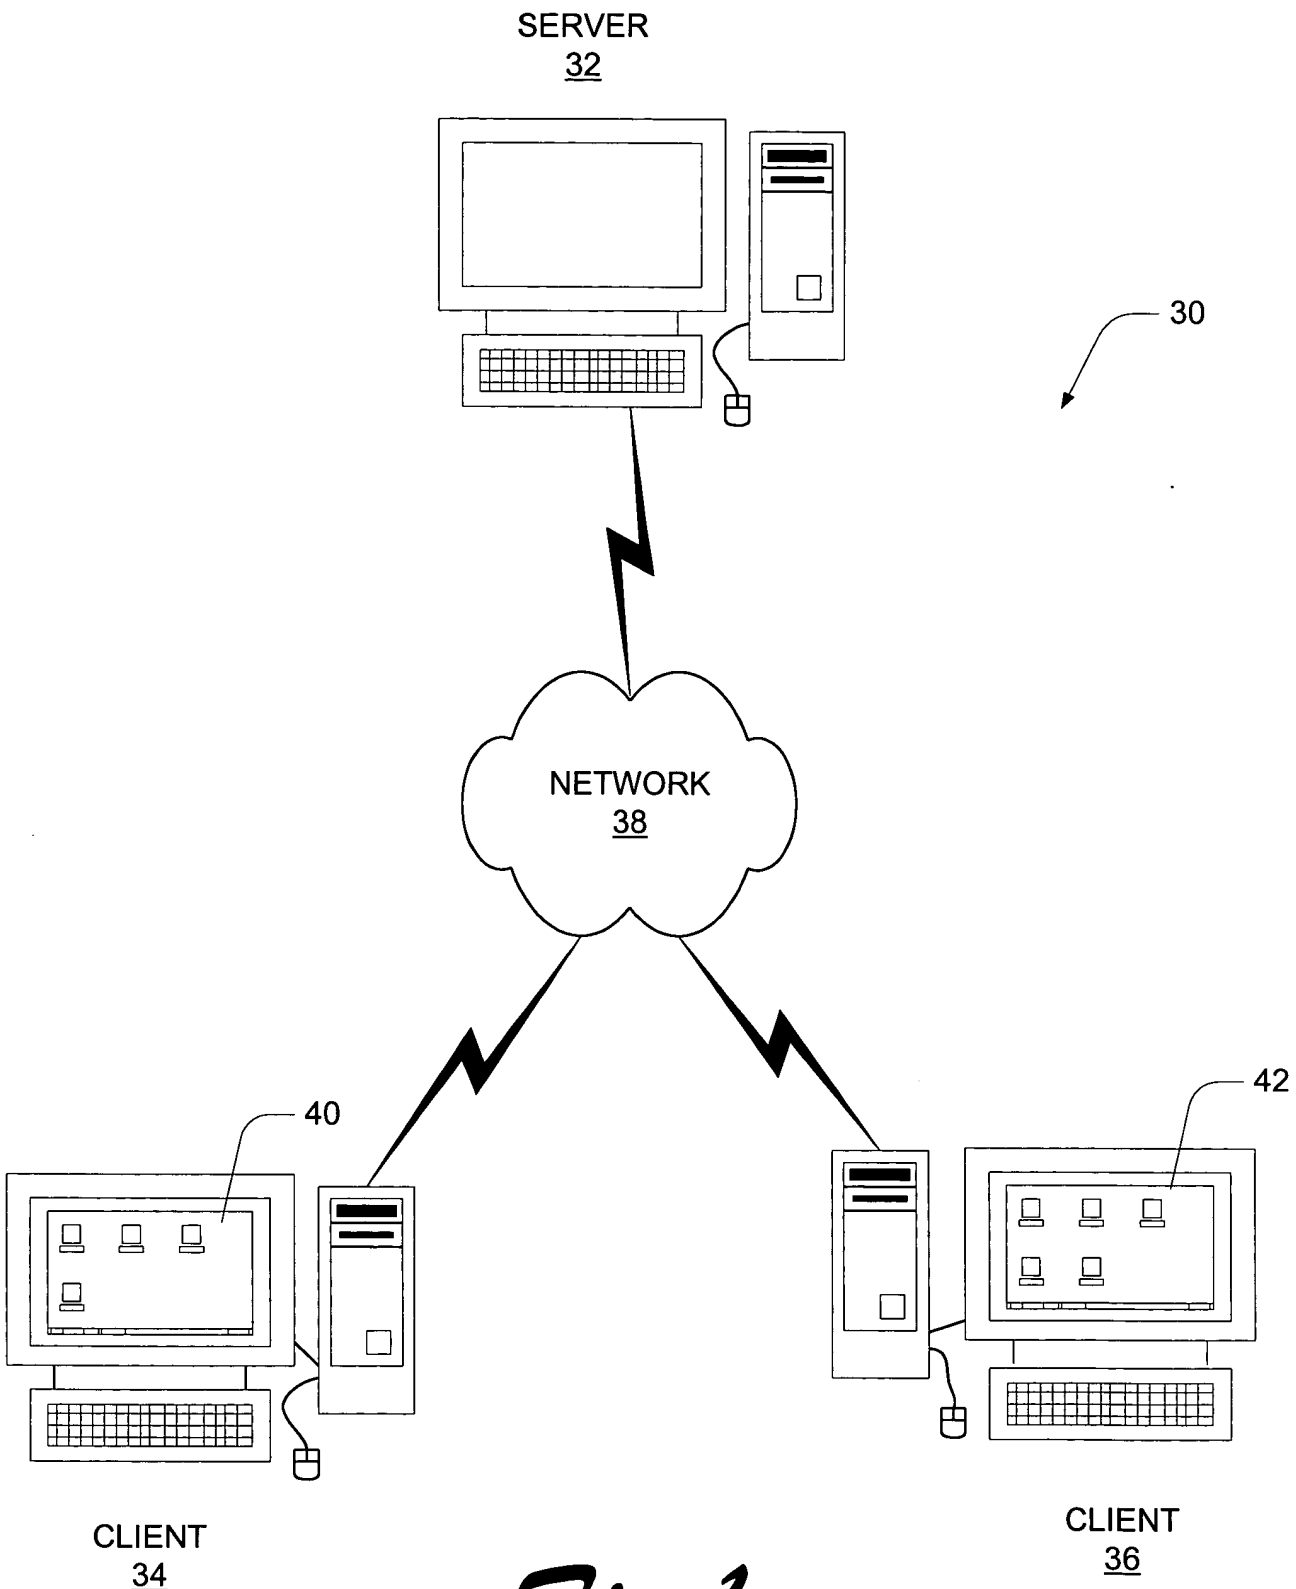

Fig. 1

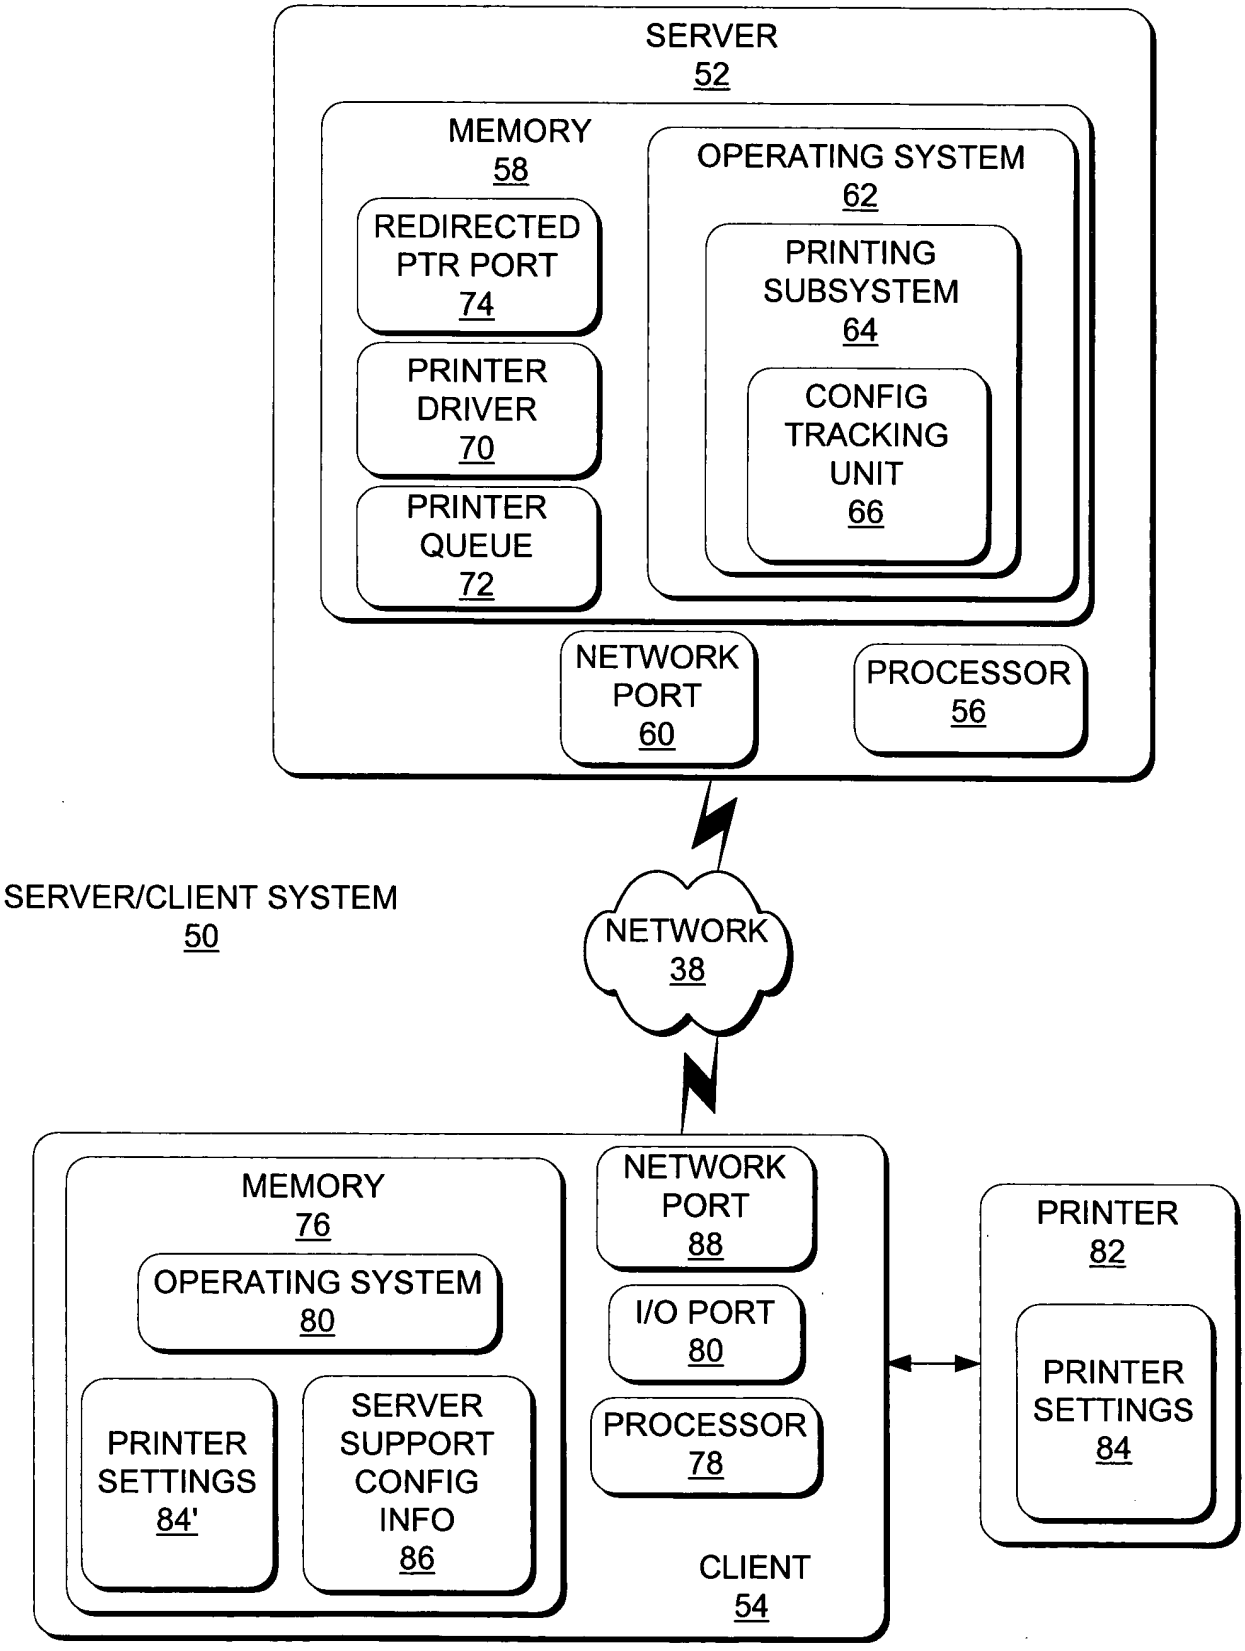
SERVER
52
MEMORY
58
REDIRECTED PTR PORT
74
PRINTER DRIVER
70
PRINTER QUEUE
72
OPERATING SYSTEM
62
PRINTING SUBSYSTEM
64
CONFIG TRACKING UNIT
66
NETWORK PORT
60
PROCESSOR
56
SERVER/CLIENT SYSTEM
50
NETWORK
38
MEMORY
76
OPERATING SYSTEM
80
PRINTER SETTINGS
84'
SERVER SUPPORT CONFIG INFO
86
NETWORK PORT
88
I/O PORT
80
PROCESSOR
78
CLIENT
54
PRINTER
82
PRINTER SETTINGS
84

Fig. 2

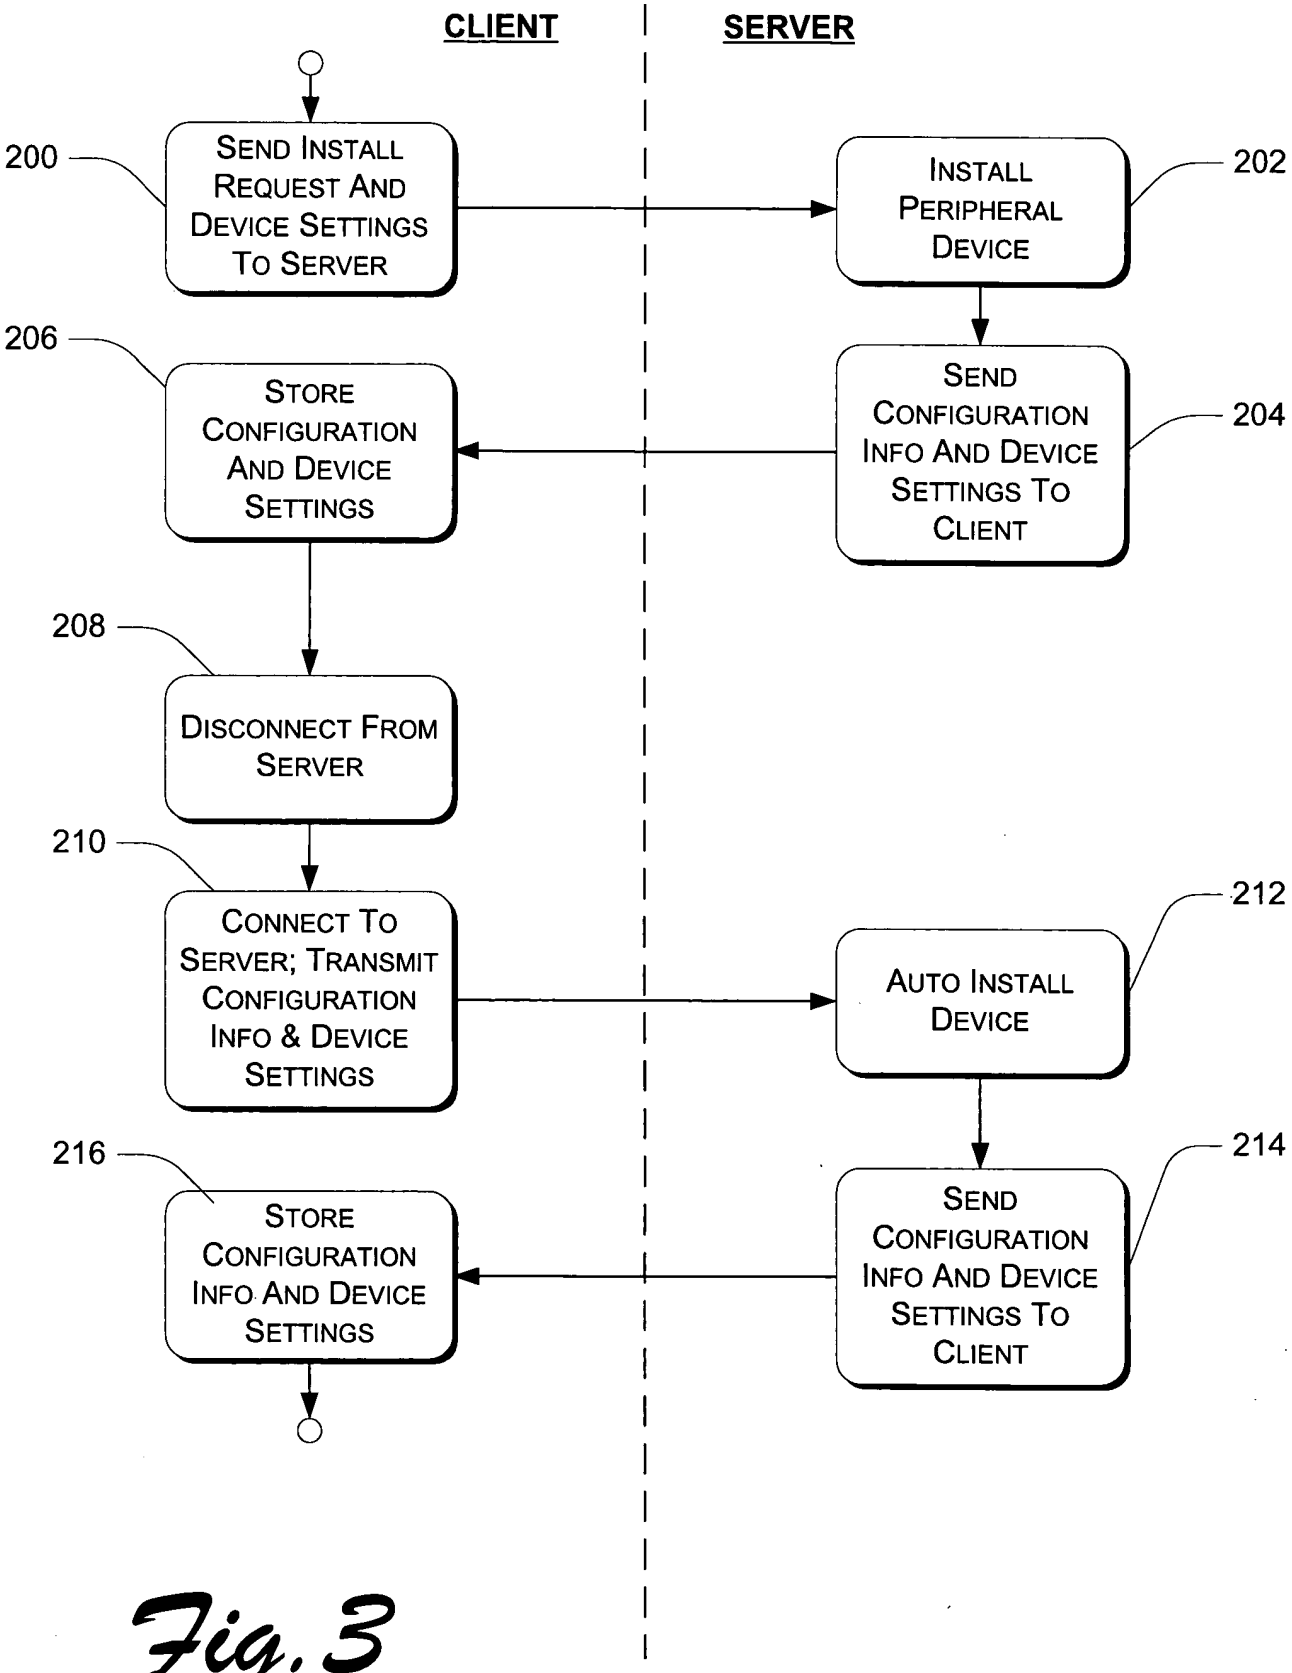
CLIENT
SERVER
200
SEND INSTALL REQUEST AND DEVICE SETTINGS TO SERVER
INSTALL PERIPHERAL DEVICE
202
206
STORE CONFIGURATION AND DEVICE SETTINGS
SEND CONFIGURATION INFO AND DEVICE SETTINGS TO CLIENT
204
208
DISCONNECT FROM SERVER
210
CONNECT TO SERVER; TRANSMIT CONFIGURATION INFO & DEVICE SETTINGS
AUTO INSTALL DEVICE
212
216
STORE CONFIGURATION INFO AND DEVICE SETTINGS
SEND CONFIGURATION INFO AND DEVICE SETTINGS TO CLIENT
214

Fig. 3

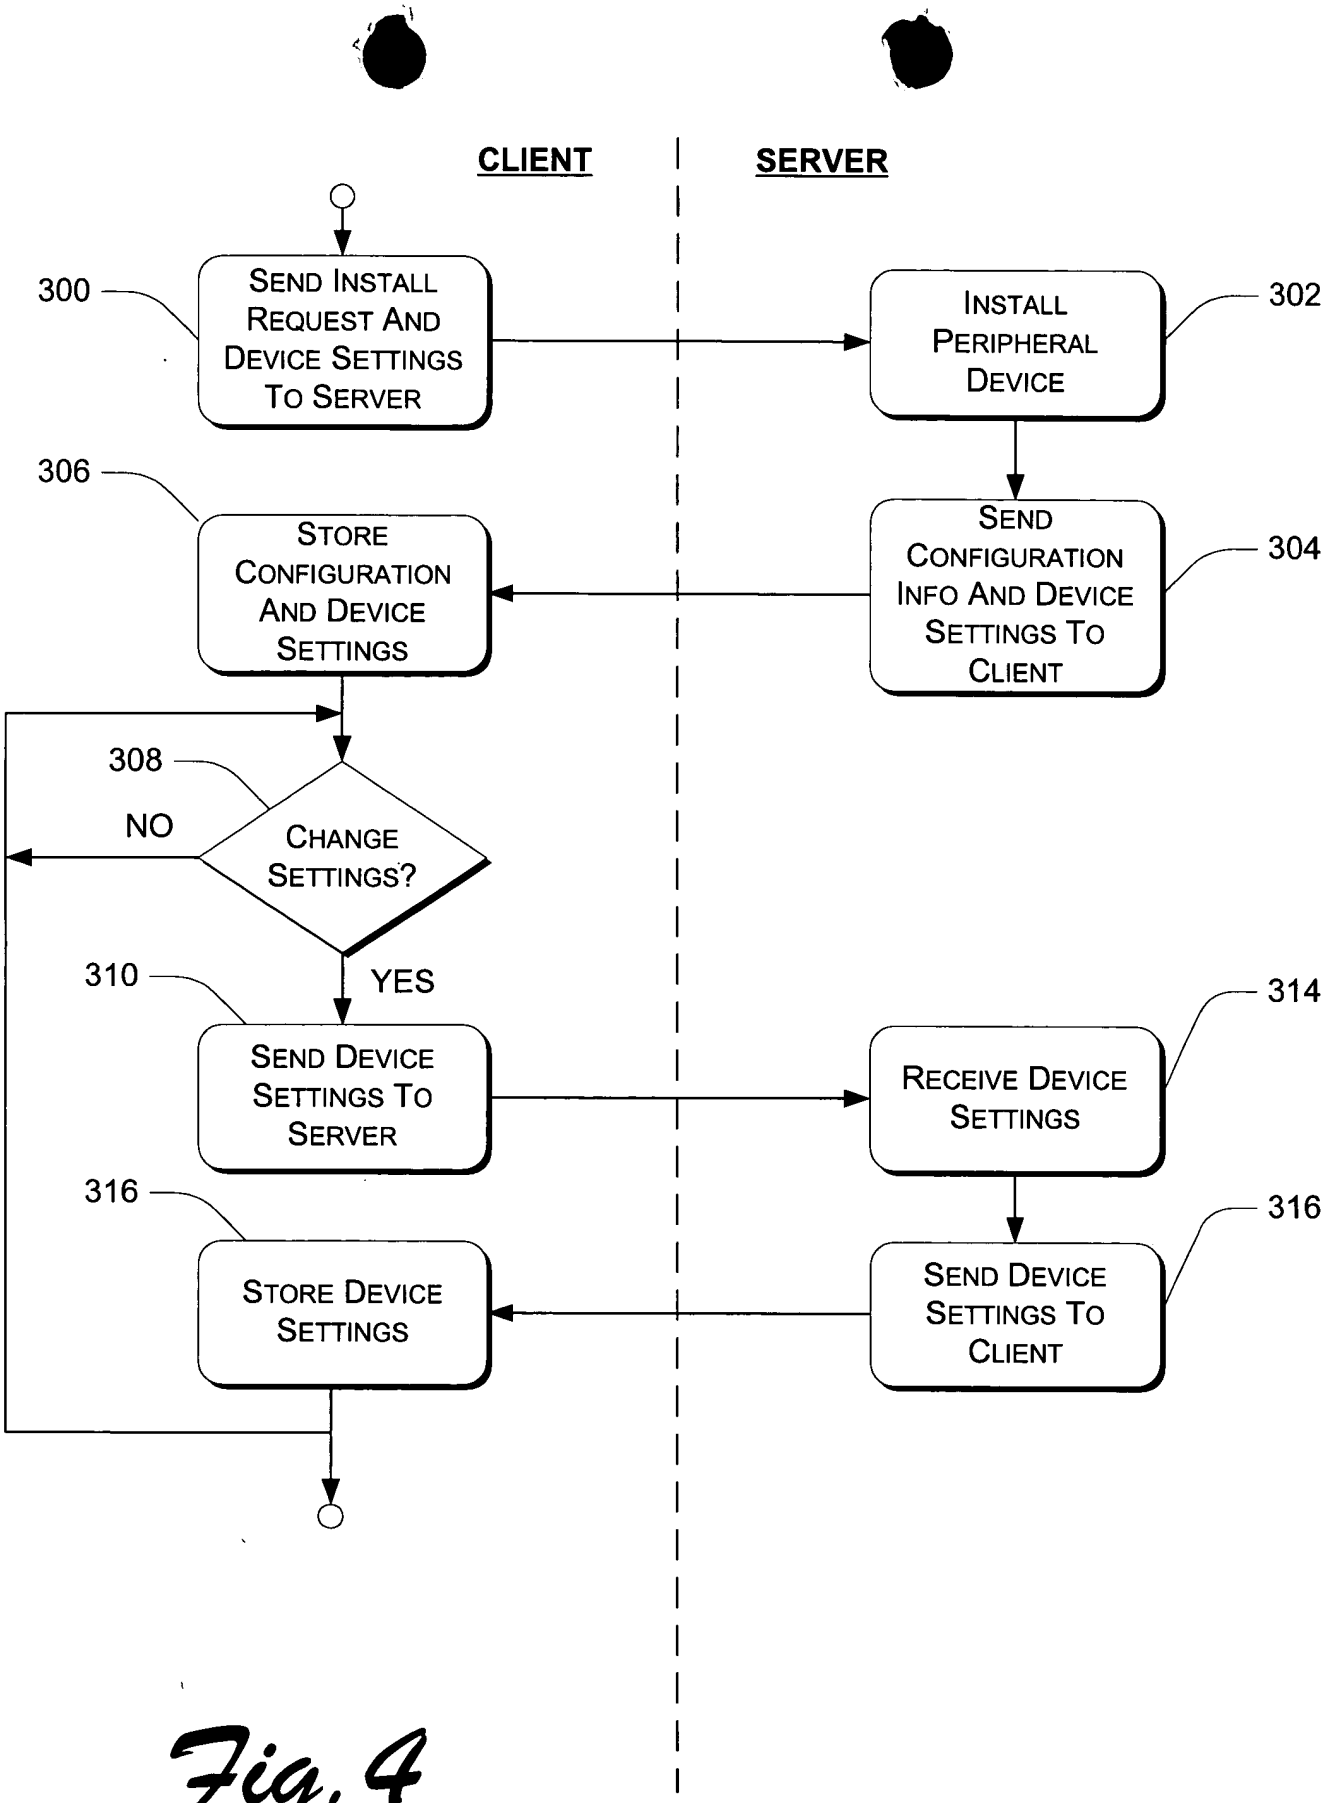
CLIENT
SERVER
300
SEND INSTALL REQUEST AND DEVICE SETTINGS TO SERVER
INSTALL PERIPHERAL DEVICE
302
306
STORE CONFIGURATION AND DEVICE SETTINGS
SEND CONFIGURATION INFO AND DEVICE SETTINGS TO CLIENT
304
308
NO
CHANGE SETTINGS?
YES
310
SEND DEVICE SETTINGS TO SERVER
RECEIVE DEVICE SETTINGS
314
316
STORE DEVICE SETTINGS
SEND DEVICE SETTINGS TO CLIENT
316

Fig. 4